



## Assembly instructions for universal lift light for 2 pillar lift


### Content List:

|                            |         |
|----------------------------|---------|
| LED luminaire 120 cm./18w. | 4 pcs.  |
| Aluminum Bracket           | 4 set   |
| Multi Bracket – Angle: 90° | 8 pcs.  |
| Pop Rivets                 | 16 pcs. |

|                     |         |
|---------------------|---------|
| Self-tapping screws | 16 pcs. |
| Start plug 100 cm.  | 1 pcs.  |
| Cable 600 cm.       | 2 pcs.  |
| End Cap             | 1 pcs.  |



1. Secure the 2 angle brackets on each pillar, with about 100 cm between. Drill a 5 mm hole in the pillar and secure the alu. bracket and angle bracket on to the pillar with a pop rivet.
2. Take the luminaires out of the box and mount two on each side. Secure with a little phillips screwdriver. Notice, direction male-plug against power connection and about.
3. Connect the two luminaires in the bottom on each side. Notice, the track for correct assembling of male/female plug. (Picture 3)

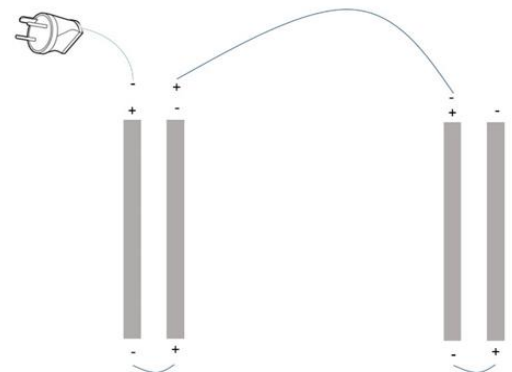

4. Connect the two sides with two pcs. of 6-meter cable. Again notice, track for correct assembling of he and female plug.
5. Attach the power supply cable on the luminaire and plug the plug in the socket. If you wish to install in a power strip, the plug can be cut off and the wires will be mounted in the box.  
**IMPORTANT: This installation must be done by an authorized electrician.**
6. Attach the end cap.
7. Turn on the power! Enjoy your RNS LIFT-LIGHT! If you have any questions regarding the installation you are always welcome to call us. We are always ready to help.